




wM-Bus radio module

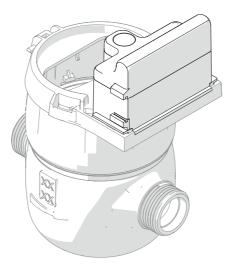

INSTRUCTIONS FOR INSTALLATION, USE AND MAINTENANCE

Translation of the original instructions.

Before installing and using the device, carefully read this manual and store it together with the product.

🕡 maddalena'

Symbols used in this manual and relative meaning



WARNING!

Indicates particularly important information.



DANGER!

Identifies actions that may lead to injury or damage to the device if not performed correctly.



PROHIBITED

Indicates actions that MUST NOT be performed.

Compliance

Maddalena S.p.A. declares that **Arrow**^{EVO} is compliant with the mandatory requirements of the following directives and standards:

- Directive 2014/53/EU (RED Radio Equipment Directive)
- Directive 2011/65/EU (RoHS)

CE

The full declaration of EU compliance is available from the following website: **www.maddalena.it**.

Warranty

Conditions of sale and warranty

The conditions of sale and warranty are available on the website **www.maddalena.it**.

Warranty limitations

Maddalena S.p.A. declines all responsibility, with immediate invalidation of the warranty in relation to:

- Damage or defects caused by transport or loading/unloading
- Incorrect installation caused by a failure to observe the instructions provided
- Use for purposes other than those indicated in this manual
- Use by unqualified or untrained personnel

Contents

| 1 | General information3 | | | | |
|---|----------------------|---------------------------------|--|--|--|
| | 1.1 | Warnings and safety rules3 | | | |
| | 1.2 | Restrictions 4 | | | |
| | 1.3 | Device description4 | | | |
| | 1.4 | Usage limits5 | | | |
| | 1.5 | Structure5 | | | |
| | 1.6 | Identification5 | | | |
| | 1.7 | Meter technical specifications6 | | | |
| 2 | Installation7 | | | | |
| | 2.1 | Receipt of the product7 | | | |
| | 2.2 | Fitting on meter7 | | | |
| 3 | Use . | | | | |
| | 3.1 | Synchronisation of | | | |
| | | mechanical reading11 | | | |
| | 3.2 | Activating the radio module 11 | | | |
| | 3.3 | Programming on initial | | | |
| | | installation of the module12 | | | |
| | 3.4 | Troubleshooting12 | | | |
| 4 | Maint | tenance | | | |
| | 4.1 | Battery13 | | | |
| | 4.2 | Cleaning13 | | | |
| | 4.3 | Disposal13 | | | |

1 General information

1.1 Warnings and safety rules

WARNINGS

- This manual is the property of **Maddalena S.p.A.** and reproduction or transfer to third parties of the contents of this document is prohibited. All rights reserved. This document represents an integral part of the product; ensure that it is always together with the product, even in case of sale/transfer to another owner, allowing its consultation by the user or authorised maintenance or repair personnel.
- Carefully read this manual before using the device to ensure safe operation.
- The device must be used as defined by Maddalena S.p.A., that holds no responsibility for damage to persons, animals or property due to installation, adjustment or maintenance errors or improper use of the device.
- Once the packaging has been removed, check that the product is intact and complete. If the contents do not correspond to the order, consult the local distributor that sold the device.
- The device should not be installed and used in contexts where it will be exposed to atmospheric agents.
- The device must always be protected from extreme humidity and heat. Penetration of humidity and intense heat may damage the battery and the device.

- If there are any doubts regarding conditions/functions of the device and related parts, please contact the local distributor for further information.
- Once the device is in use, report any anomalies or faults encountered to the product supplier.
- In case of complete destruction of the device with leakage of the electrolyte, avoid contact with the eyes and skin, do not inhale fumes produced, and sufficiently ventilate the room.
- The device emits radio signals that may interfere with un-shielded electronic devices or those improperly shielded, such as pacemakers, hearing aids, medical devices and other electronic devices. To resolve any interference problems, consult the manufacturers of the relative electronic devices.
- This device is not for use by persons with reduced physical or mental capabilities, or those without appropriate experience and knowledge (including children), unless supervised by a person responsible for their safety and following adequate training in how to use the product.

1.2 Restrictions

PROHIBITED

- Modify and/or attempt to repair the product. All repairs must be performed exclusively by authorised personnel.
- Leave the device exposed to atmospheric agents.
- Place the device near to heat sources or expose it to direct sunlight.
- Install the device near other electrical equipment as this may lead to signal disturbance.
- Open and/or replace the battery.
- Use solvents to clean the device.
- Incorrectly dispose of packaging material and keep it out of children's reach as it may represent a hazard. Disposal must be performed in line with applicable laws.
- Dispose of the device as domestic waste.

1.3 Device description

Arrow^{EVO} is a compact radio module for **Maddalena** MVM, MVM Plus C and WMAP Evo cold water meters that allows for remotely measuring, transmitting and reading the consumption values and the alarms using wireless technology.

The following alarms are managed: maximum flow exceeded (limit can be activated and configured), backflow (limit set and configurable), leak, electronic fraud and mechanical fraud (removal).

Arrow^{EVO} is compliant with the wM-Bus data communication protocol defined at European level by Standard EN 13757. This guarantees a high level of interoperability with various reading systems on the market, including third-party systems.

Arrow^{EVO} is also OMS certified (www.omsgroup.org).

The factory set-up can be modified via radio signal at a later point using the special configuration kit (USB transceiver and relative software), supplied separately.


The main technical specifications of the **Arrow**^{EVO} design are:

- internal sensor that identifies rotation of the pointer on the meter using the principle of induction (immune to magnetic interference), calculates the volume (in both directions), manages alarms and stores data in a non-volatile memory;
- M-Bus (EN 13757) 868 MHz radio wireless communication interface that allows remote reading in both mobile (walk-by) and fixed (AMR) scenarios, using the same factory set-up (transmission interval);
- **lithium battery** that guarantees long-term power supply (15 years + 1)

1.4 Usage limits

The product may be used exclusively with compatible meters and in line with the corresponding usage limits (see paragraph " **Meter technical specifications**").


1.5 Structure

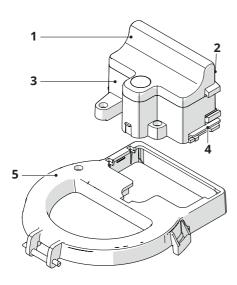

- 1 Cover
- 2 Antenna
- 3 Casing
- 4 Magnetic key attachment reference
- 5 Adapter

1.6 Identification

The **Arrow**^{EVO} module, identified by the label (A), is strictly associated with a single meter. Two elements are required for this association, performed during installation: the serial number of the mechanical meter and the serial number of module **Arrow**^{EVO}.

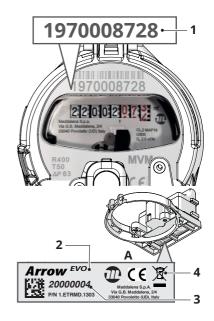

- **1** Serial number of the meter
- 2 Model
- 3 Eight-digit serial number of module Arrow^{EVO}
- 4 WEEE compliance mark

The serial number can be read via radio signal or on the label of the module itself. If necessary, during programming it is possible to store the serial number of the mechanical meter within the radio module, so that this is available within the data transmitted.

🕀 maddalena'

1.7 Meter technical specifications

| Features | | Description | | | |
|--------------------------|------------------------------|--|--|--|--|
| Sensor | | Inductive (two-way) | | | |
| Compatible meters | | MVM, MVM PlusC, WMAP Evo | | | |
| Sensor resolution | | Depends on the meter model to which it is connected. | | | |
| Alarms | | Tampering, electronic fraud, backflow, presumed leak, max mum flow, inverted meter | | | |
| Configuration | | Via radio using configuration kit | | | |
| Power supply | | Lithium-ion battery | | | |
| Battery lifespan | | 15 years + 1 in storage | | | |
| Certifications/Approvals | | CE in compliance with European standards. | | | |
| | | RED 2014/53/EU, RoHS2 (EU) 2017/2102 | | | |
| | | ISO 4064 Ancillary device 6.3 | | | |
| | | OMS: | | | |
| | Standard | Wireless M-Bus, OMS | | | |
| | Modes | C1 (Default), T1 (Optional) | | | |
| | Operating frequency range | 868.0 - 868.6 / 868.7 - 869.2 MHz | | | |
| | Radiated power | max 14dBm | | | |
| | Range | 500 m in line of sight | | | |
| | Reference standards | EN 13757 | | | |
| Radio | Radio equipment class | Class 1 | | | |
| | | Frame Tiny (default): current volume, date and time, volume on billing date, billing date, errors. | | | |
| | Data cont | Short frame: current volume, volume on billing dates, meter serial number, alarms. | | | |
| | Data sent | Long frame: same as short frame with addition of values for the previous 12 months | | | |
| | | Frame Arrow: current volume, volume on billing date, meter serial number, billing date, alarms | | | |
| Environmental conditions | | Storage temperature: -20°C – +60°C | | | |
| | | Operating temperature: -10 °C – +55 °C | | | |
| Protection rating | | IP68 | | | |




2 Installation

2.1 Receipt of the product

Arrow^{EVO} modules are supplied in two different formats:

- A Single package, already fitted on meter
- B Package with 10 pieces with ~20 fixing screws and 20 yellow seals

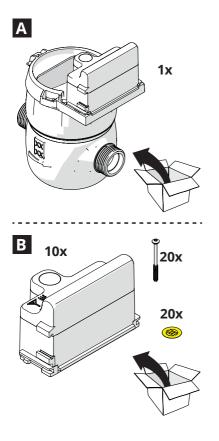

WARNING!

The instruction manual is an integral part of the device and should be carefully read and stored.



PROHIBITED

Packaging material must be properly disposed of and kept out of children's reach as it may represent a hazard. Disposal must be performed in line with applicable laws.

2.2 Fitting on meter



WARNING!

Installation and management of the device is permitted solely by authorised and appropriately trained personnel equipped with sufficient technical experience.

Authorised personnel: specialised installer or plumber, assigned by the metering operator.


MVM and MVM Plus C

 If present, remove the protective cover (1) of the meter and clean the surface near the pointer.




🕧 maddalena'


– Attach the $Arrow^{EVO}$ (2) module to the – Lower the module and offset it. adaptor (3).

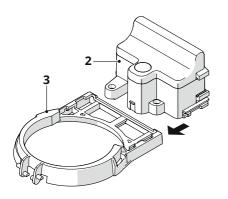


- Attach the adaptor (4) to the relevant housing.

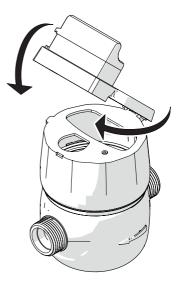

- Attach the eyelet (5) to the catch (6) and realign the module.

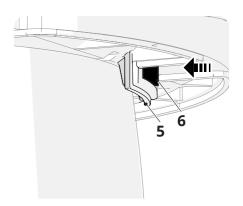

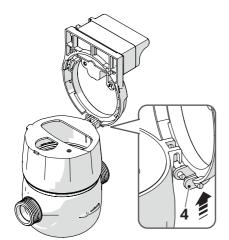




WARNING!


Do not apply pressure to force the eyelet in.

- Fasten the module using the screw (7) and apply the anti-fraud seal (8).

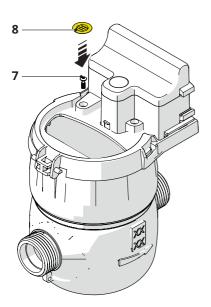


WMAP Evo

- If present, remove the protective cover (1) of the meter and clean the surface near the pointer.

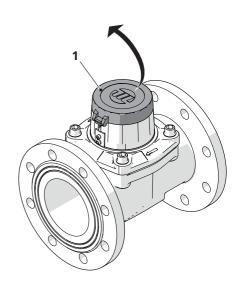


- Attach the **Arrow**^{EVO} (2) module to the adaptor (3).

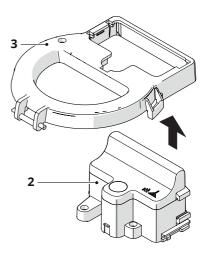

迎 maddalena'


housing.

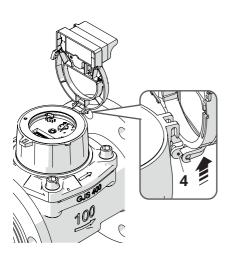

- Lower the module and offset it.



- Attach the adaptor (4) to the relevant | - Attach the eyelet (5) to the catch (6) and realign the module.

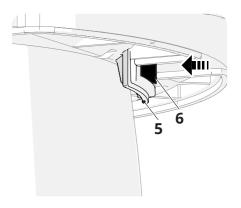




WARNING!

Do not apply pressure to force the eyelet in.

- Fasten the module using the screw (7) and apply the anti-fraud seal (8).

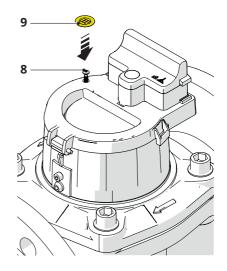

3 Use

The fully operational phase involves remote meter reading via the radio modules. Each radio module transmits the reading with a settable frequency (default: reading transmitted every 16 seconds). Simply approach the meter with a suitable receiver or, if there is a fixed reading system, the data will be collected automatically.

WARNING!

Reading of data can be performed using various software. Please consult the metering operator for more information on the specific use of reading software.

3.1 Synchronisation of mechanical reading


The radio module stores the volume recorded via an inductive sensor. The module is set-up in the factory with initial volume at zero.

If the meter on which the radio module is installed has a reading other than zero, synchronisation of the mechanical meter reading and radio module is recommended using the programming kit. Simply read the value in litres on the meter and set the reading using the programming software.

3.2 Activating the radio module

The **Arrow**^{EVO} module is deactivated by default, therefore it will not transmit nor count. To activate the module: insert the red activation key (1) in the appropriate slot (2) and keep it there for over 10 seconds.

If the key is inserted for less than 10 seconds, the module is NOT activated.

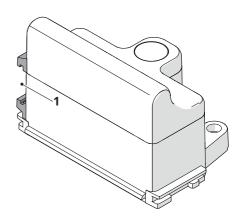

WARNING!

For a complete list of programming parameters and relative settings, refer to the specific manual.

PROHIBITED

Programming of the **Arrow**^{EVO} module without approval of the metering operator is not permitted.

🕡 maddalena'

3.3 Programming on initial installation of the module

The **Arrow**^{EVO} module is supplied with a series of set-up data already set to the default values.

On first installation, after activating the module, you can change the settings if necessary using:

 Evo Console PC (MS Windows) – download from www.maddalena.it in the software section

| Rado Evo | • | | | | | rogram me |
|------------------------------------|---------------------------------|--------------------|---------------|--------------|--------------------------|-----------------------|
| Actual reading Actual reading - | : | | | | etup overflow alarm - | Alarm res • Manual |
| Mechanical s/ | | | | | | O Auto da |
| 1234567 | | | | Backfow | | Auto w |
| Radio Setup | | | | Threshold | 0,001 m3 😳 | Auto m |
| Transmission mon | ths | Transmission day | s | 🖂 Leakage | alarm | C Plano y |
| 🖾 January 🖾 Febru | ary 🖂 March | Monday | Tuesday | Pulse window | 15 min 🔮 | |
| 🗹 Apri 🛛 🖾 May | 🖂 June | Wednesday | Thursday | Leakage per | od 48 hrs 🔅 | |
| 🖬 July 🖙 Augu | | | Saturday | No consu | mption alarm | |
| October I Nove | AVNone | Sunday | Al/None | Period | 30 days | |
| Radio ON | | Transm | every 120 sec | Date and | | |
| Frame | Mode Encryp | tion From ho | | Date and | time | |
| Long frame | C1 • No end | ryption * To hour: | 18 | | 21 15:16:51 ~ | |
| Counting conditio | ns: | | | | | |
| - new battery | | 12y | | Reset Al | | |
| | , | 129 | | Radio Al | S Key | |
| Billing dates | | | | | | |
| Periodic reading 1 On day: 1 | Periodic reading | | | | | |
| On day: 1 | On day: end of | month C | | | | |
| port interest port | | | | | | |
| | | | | | | |

3.4 Troubleshooting

FAULT CAUSE SOLUTION Move devices to a sufficient distance Electrical or electronic away devices interfere with the signal Move the receiver closer The radio module is not Replace the battery (contact the metering transmitting Battery empty operator) Mechanical fraud alarm Contact the metering operator active Fixing screw stripped Contact the metering operator The LED of the radio Faulty module Contact the metering operator module does not light up during installation Mechanical fraud alarm Contact the metering operator active



WARNING!

For a complete list of alarms, please refer to the specific manual.

 Evo app (Android OS) – download from Google Play Store



These two programs can be used to change the radio's default settings.

4 Maintenance

4.1 Battery

The radio module is fitted with a 3.0 volt lithium battery that cannot be recharged.

The typical lifespan of the battery is 15 years, calculated using the factory set-up (mode c, tiny telegram: 1 message every 16 seconds) and in the following operating conditions:

- between -10°C and +0°C for 10% of lifespan
- between 0°C and +30°C for 80% of lifespan
- between +31 °C and +55 °C for 10% of lifespan

WARNING!

Humidity and intense heat may damage the battery and reduce its lifespan.

The radio module calculates the residual lifespan of the battery on the basis of stored parameters, such as estimated consumption of the electronic board in stand-by mode, transmitter consumption and number of transmissions performed.

Battery life depends largely on the frequency of data transmission set.

4.2 Cleaning

No particular cleaning procedures are required. However, the installation area should be kept clean and periodic checks should be performed to ensure the required environmental conditions are met.



PROHIBITED

Use of abrasive products, petrol or trichloroethylene is not permitted.

4.3 Disposal

The device is composed of materials of various nature including metal, plastic and electrical and electronic components. It must be disposed of in compliance with applicable local laws regarding special and industrial waste. The device cannot be disposed of as domestic waste.

At the end of the product's life, ensure safe removal and responsible disposal of components, including recycling of batteries, in compliance with applicable environmental laws in the country of installation.



| 🕀 maddalena' | | |
|--------------|------|--|
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |

| 🕀 maddalena |
|-------------|
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |



MADDALENA spa

Via G.B. Maddalena 2/4 - 33040 Povoletto (Udine) Tel. +39 0432 634811 www.maddalena.it

Maddalena S.p.A. reserves the right to change its products at any time and without prior notice, with the aim of improving them and without compromising primary features. All the graphic illustrations and/or photographs appearing in this document can be represented with optional accessories that vary in relation to the country where the device is used.